


Assembly Instructions

Item No: OP-CH-950CA-MIS-RTA

Description: OAK PARK WIDE SLAT BACK ARM CHAIR WITH CUSHION SEAT

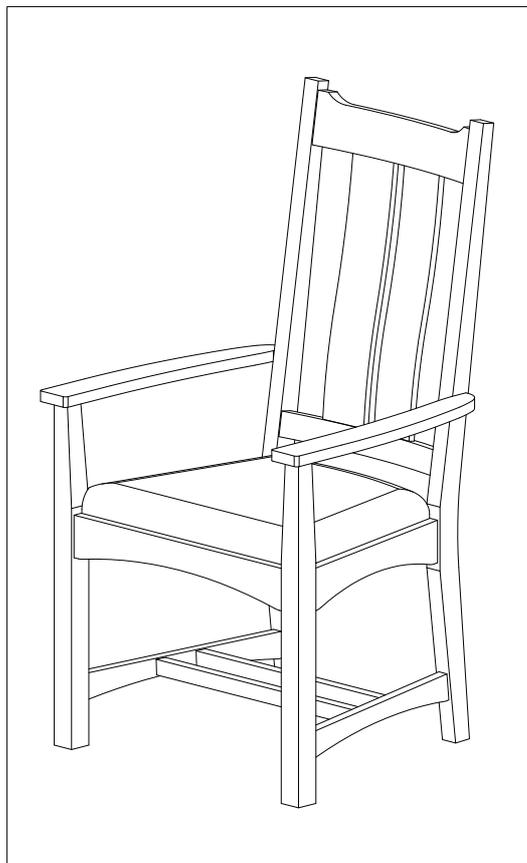

IMPORTANT NOTES :

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched .
- Check to be sure that you have all parts and hardware .
- Remove all wrapping materials, including staples and packing straps before you start to assemble .
- Do not tighten all screws and bolts until completely assembled .
- Keep all hardware out of the reach of children .

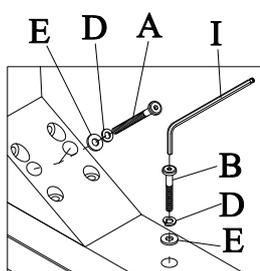


Diagram 1

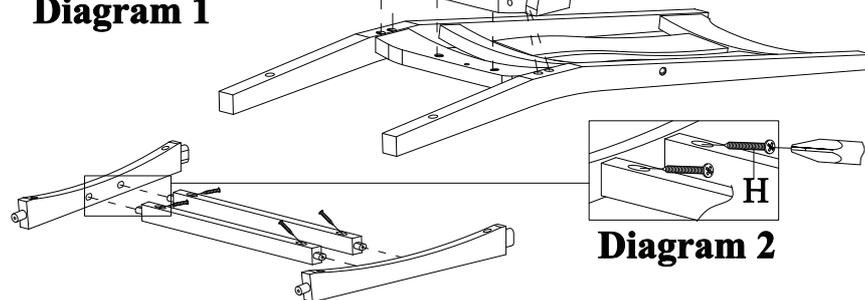


Diagram 2

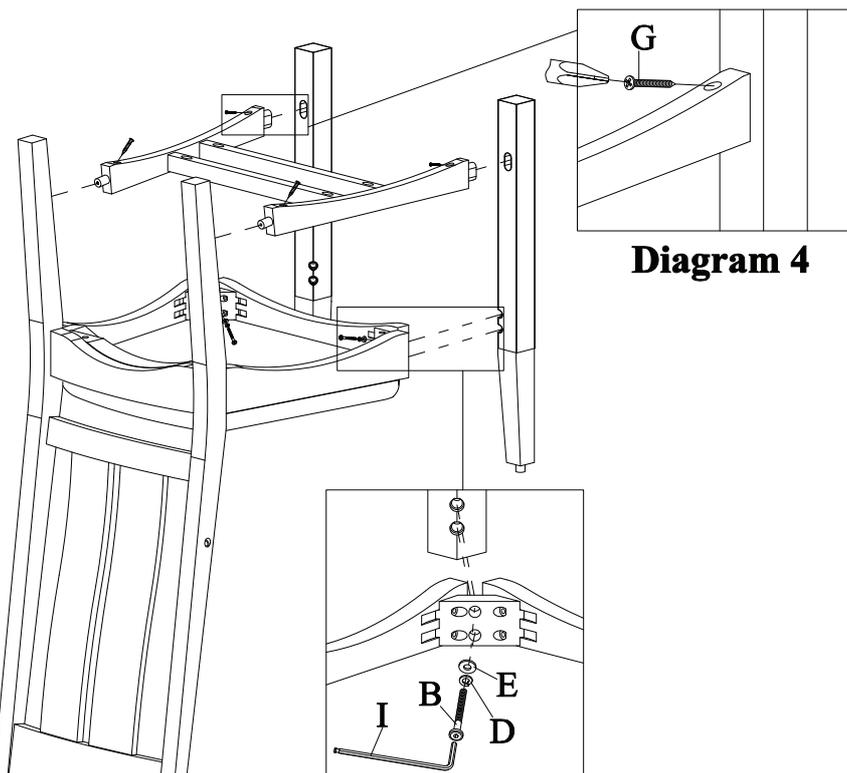


Diagram 3

Parts List (For One Chair)

No.		Q'ty
1	Backrest	1
2	Seat Frame with Cushion	1
3	Left Front Leg	1
4	Right Front Leg	1
5	Left Arm	1
6	Right Arm	1
7	Left Side Stretcher	1
8	Right Side Stretcher	1
9	Front Middle Stretcher	1
10	Back Middle Stretcher	1

Hardware List (For One Chair)

No.		Size	Q'ty
A	Bolt	 M8 x 80	4
B	Bolt	 M8 x 60	6
C	Bolt	 M8 x 40	2
D	Lock Washer	 Ø8.5/13	12
E	Flat Washer	 Ø8.5/19	10
F	Flat Washer	 Ø6.5/13	2
G	Screw	 Ø4 x 50	4
H	Screw	 Ø4 x 30	4
I	Allen Key		1
J	Knot	 Ø14.5 x 9	4

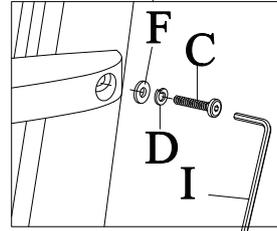
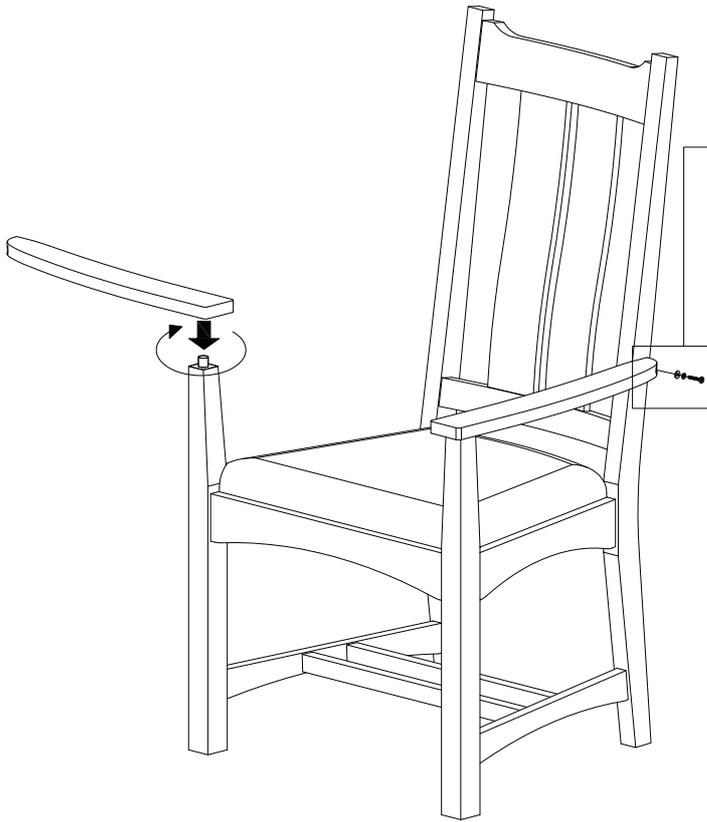


Diagram 5


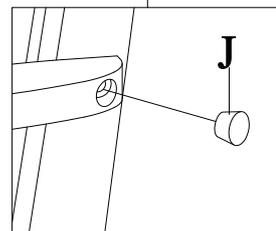


Diagram 6

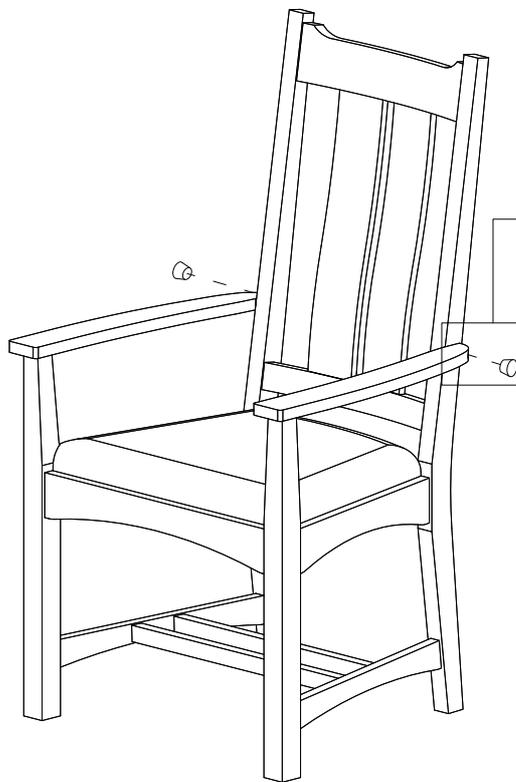